



MOTO-MATE KTM 1290 Super Adventure Raised Navigation Mount Installation

Please Note:

On the 2021 – 2025 KTM 1290 SAS/R there are accessory connections ACC1 & ACC2 behind the right hand fairing panel by the air intake. ACC2 is the ignition live switched circuit and is the one you need to connect your navigation cradle to.

Steps

1. Remove the screen and small infill panel which just pulls upwards




- 3) Remove the upper tft mounting screws (one on each side)



- 4) Remove the lower tft mounting screw on the left side and using a long small bar push the top hat bush out to the right side of the bike



- 5) Lift the tft forward and unplug the connector
6) Remove the two top screws that hold the mounting frame to the tft
7) Place the two small spacers into the top tft mounting holes in the tft frame and place the nav mount on top.

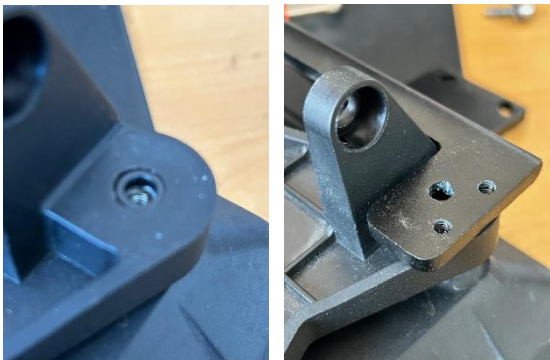

- 8) Place the L brackets onto the nav mount and loosely add the two M4 x 10mm screws and washers





- 9) Slide the L bracket away from the tft frame mounting arm and insert the stepped spacer into the mounting frame hole – narrow end first so it fits in the hole in the mounting frame



- 10) Loosely insert the M5 x 20mm screws through the L bracket and nav mount into the tft
- 11) Once you have completed steps 8-10 on both sides push the L bracket into the mounting frame securing the stepped spacer in place and tighten the two M4 screws, then tighten the M5 screw into the tft
- 12) Reconnect the connector and assemble the frame back onto the bike using the longer provided M5 Allen bolts and washers into the two upper mounting screws and the lower top hat bush and KTM screw in the lower mount.
- 13) Mount your navigation cradle onto the mount
- 14) Replace trim panel and screen.

PLEASE NOTE:

When fitting your nav, please support the nav mount from behind to resist the pressure of mounting the nav' unit