




MOTO-MATE KTM 1290 Super Duke GT Gen 2 Raised Navigation Mount Installation

Steps

1. Connect your Sat Nav cradle to your bikes ACC2 or other electrical supply
2. Remove the upper tft mounting screws (one on each side) and the lower tft mounting screw on the left side and 8mm nut on the right side of the bike

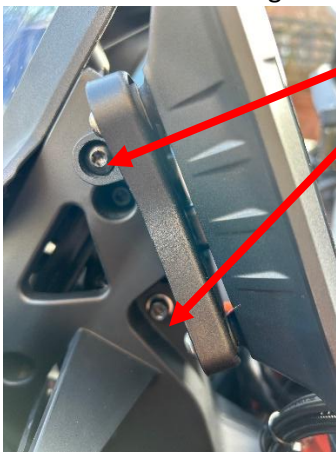

- 3) Lift the tft forward and unplug the connector
- 4) Remove the four screws that hold the mounting frame to the tft
- 5) Place the nav mount onto the back of the tft frame and fix with the 4 x M5 x 12mm screws and washers. DO NOT OVERTIGHTEN THEM
- 6) Reconnect the connector and assemble the frame back onto the bike using the original screws in the upper mounts and the longer M5 bolt and nut in the lower mount.
- 7) Mount your navigation cradle onto the mount

TomTom / Garmin / Phone?

If you are using a Garmin nav device it will use 4mm threaded fasteners, in this case please insert the aluminum spacers into the holes to take up the clearance. TomTom, Quadlock and other systems that use 5mm threaded fasteners will not require these spacers.

PLEASE NOTE:

When fitting your nav, please support the nav mount from behind to resist the pressure of mounting the nav' unit