



MOTO-MATE Moto Guzzi V100 Mandello Raised Navigation Mount Installation

Please Note:

Steps


1. Remove the screen and place it somewhere safe where it won't get scratched




- 3) Remove the left and right side inner trim panels (2 x screws per side)



- 4) Remove the upper inner trim panel, 4 screws inside and 1 central behind screen frame – you will need to raise the screen to access it

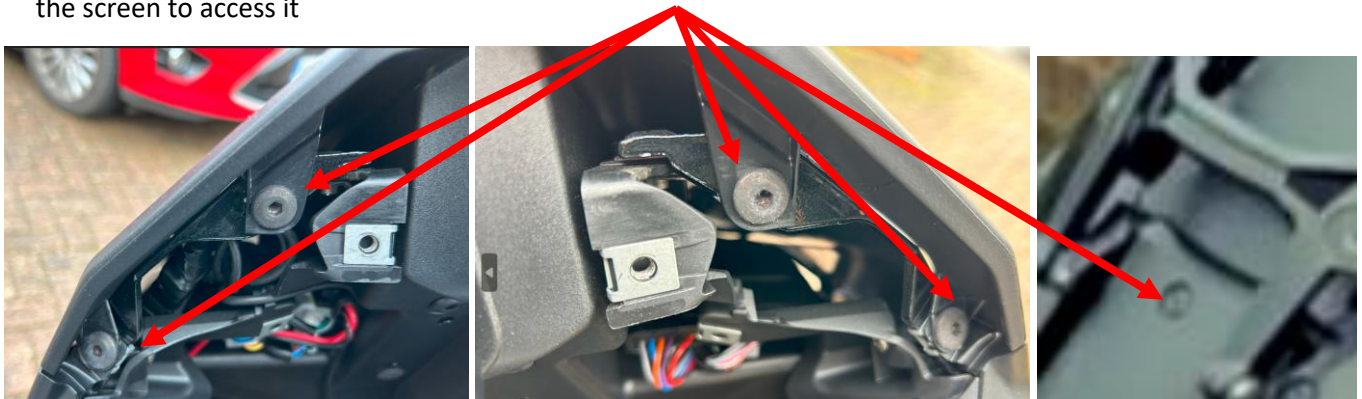

- 5) Remove the 3 Cross-head screws holding the tft

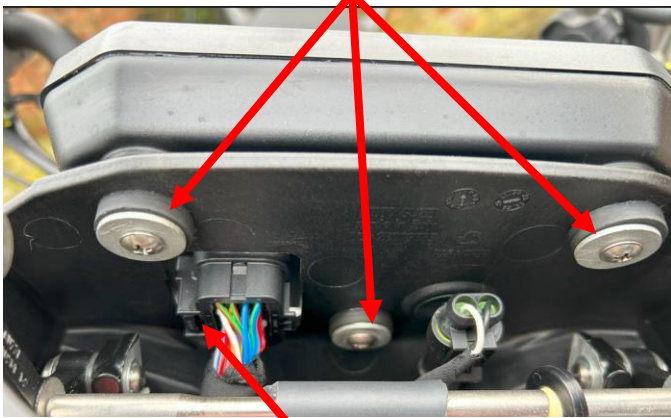

- 6) Unplug the connector and remove the tft display
- 7) Place the nav mount over the three mounting bosses of the tft and replace it in the frame.
- 8) Using the supplied longer screws and original large washers, place one of the black aluminium bushes over each screw and tighten the tft back up.

9) TomTom / Garmin / Phone?

If you are using a Garmin nav device it will use 4mm threaded fasteners, in this case please insert the aluminum spacers into the holes to take up the clearance. TomTom, Quadlock and other systems that use 5mm threaded fasteners will not require these spacers.

- 10) Replace trim panels in reverse of removal and screen.

PLEASE NOTE:

When fitting your nav, please support the nav mount from behind to resist the pressure of mounting the nav' unit