



MOTO-MATE Moto Guzzi V85 2019-2023 Raised Navigation Mount Installation

Steps

1. Remove the screen and place it somewhere safe where it won't get scratched




2. Remove the two front screen frame screws and slacken the rear two then fold the frame over the top of the instruments




- 3) Remove the two self tapping screws on the rear of the instrument cover and also the front beneath the instruments and remove the cover



- 4) Remove the three self tapping screws that hold the instruments in place, unplug the connector and remove the instruments

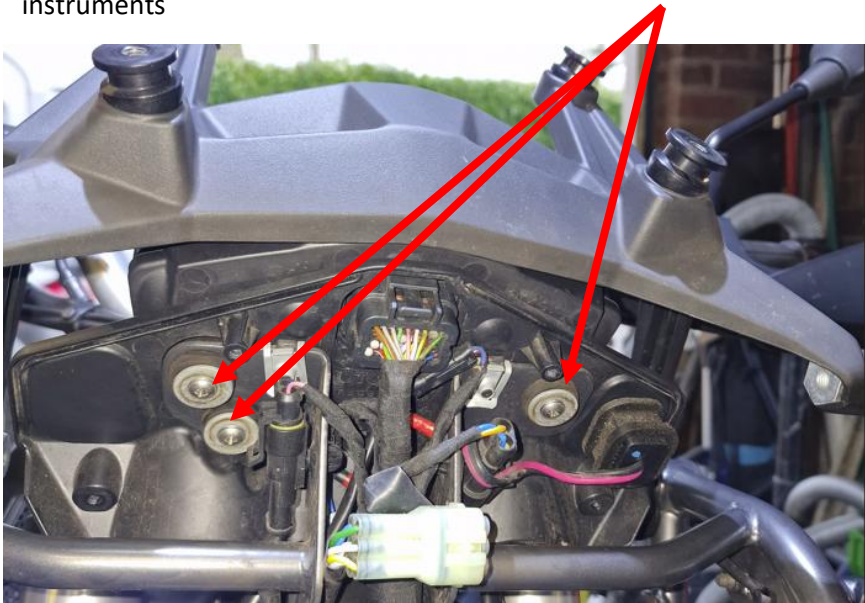

- 5) At the front there are two screws that hold the instrument trim panel, remove these and using the two countersunk screws in the kit secure the nav mount to the instrument panel.

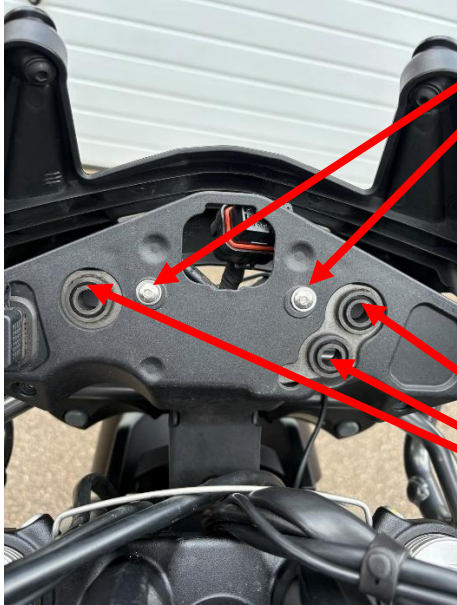

- 6) Place the tft back into the three rubber bushes on the instrument mounting plate.
- 7) Using the supplied longer screws and original large washers, place one of the black aluminium bushes over each screw and tighten the tft back up.
- 8) TomTom / Garmin / Phone?**
- If you are using a Garmin nav device it will use 4mm threaded fasteners, in this case please insert the aluminum spacers into the holes to take up the clearance. TomTom, Quadlock and other systems that use 5mm threaded fasteners will not require these spacers.
- 9) Reassemble in reverse of removal

PLEASE NOTE:

When fitting your nav, please support the nav mount from behind to resist the pressure of mounting the nav' unit