

MOTO-MATE KTM 1390 Super Adventure Raised Navigation Mount Installation

Steps


1. Remove the screen and put it somewhere safe where it won't get scratched

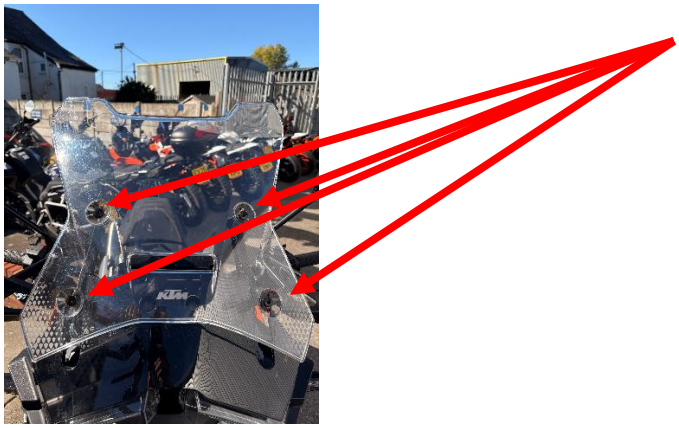

2. Remove the trim panel (4 screws, 2 front one on each side)

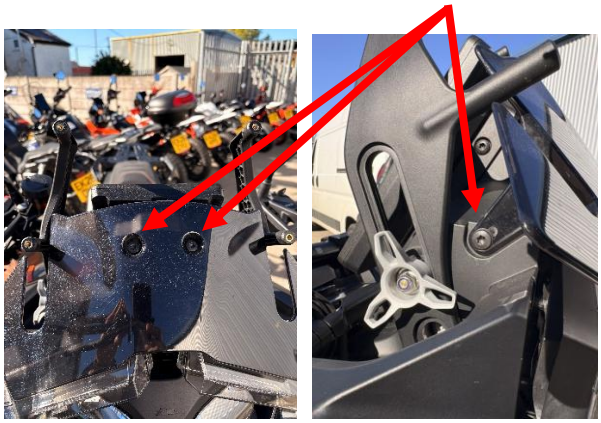

3. Remove the 4 tft mounting screws (two on each side)

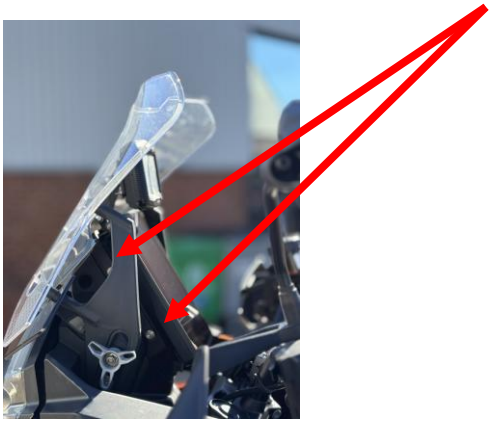

4. Insert the 4 black top hat bushes from the kit into the tft mounting holes (Phil's top tip: use a dab of grease to hold them in place)

5. Slide the frame over the 4 bushes with the protrusion forward to the tft



6. Place the 4 M5 x 25mm screws and washers from kit into the tft mounting holes and tighten

7. **TomTom / Garmin / Phone?**

   If you are using a Garmin nav device it will use 4mm threaded fasteners, in this case please insert the aluminum spacers into the holes to take up the clearance. TomTom, Quadlock and other systems that use 5mm threaded fasteners will not require these spacers

8. Replace trim panel and screen.

PLEASE NOTE:

When fitting your nav, please support the nav mount from behind to resist the pressure of mounting the nav' unit