

MOTO-MATE Husqvarna 901 Raised Navigation Mount Installation

Steps

1. Remove the screen and put it somewhere safe where it won't get scratched

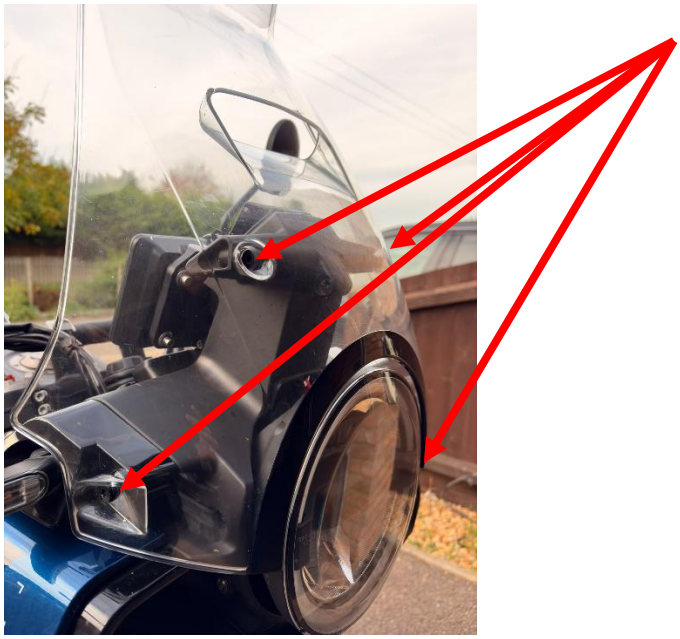

2. Remove the 4 screws from the back of the instruments taking care not to lost the aluminum spacers.

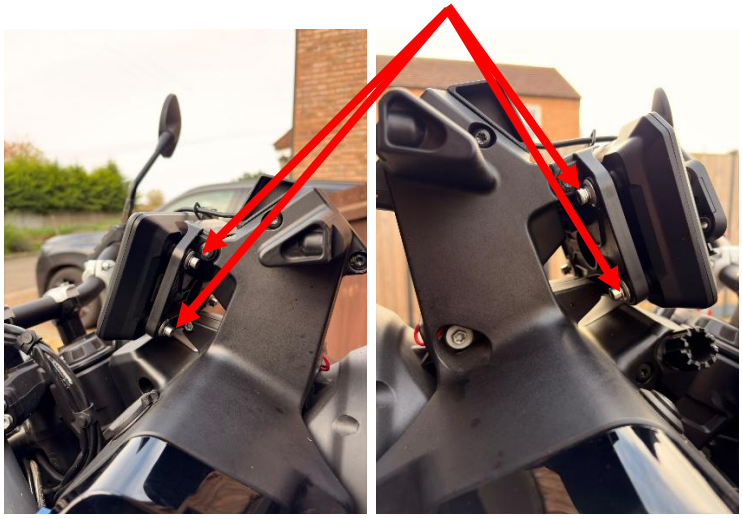

3. Place the nav mount in position behind the instrument mounting frame and use the 4 longer screws and washers supplied to tighten the mount. **NOTE: Do NOT overtighten** these screws as you can tear the isolation bushes.

4. Fit the two arms from the nav mount back to the OE trim panel securing point place a top hat spacer bush into the the hole where the OE screw was fitted and use the provided longer screws in the kit into these holes and the M5 x 12mm screws and washers onto the mount.

   Please note: the slotted end of the tie bars is designed to fit to the screws on the OE tower and 5mm clearance holes are screwed into the nav mount.



5. Mount your devices cradle to the nav mount

6. **TomTom / Garmin / Phone?**

   If you are using a Garmin nav device it will use 4mm threaded fasteners, in this case please insert the aluminum spacers into the holes to take up the clearance. TomTom, Quadlock and other systems that use 5mm threaded fasteners will not require these spacers

7. Replace the screen.

8. Go for a ride and enjoy the enhanced visibility of your nav mount

PLEASE NOTE:

When fitting your nav, please support the nav mount from behind to resist the pressure of mounting the nav' unit